




VeriGreen Inc  
20 Lindsay Road, Cambridge, ON, N1R 7K6  
Phone: 519-653-6000 Fax: 519-653-1016


## Installation of Adapter

BEFORE

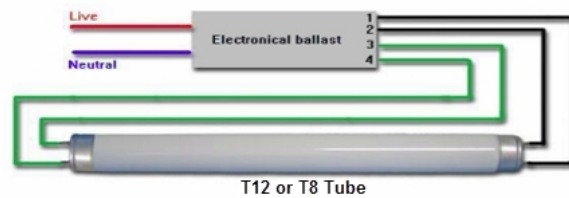

- 1. Turn off power
- 2. Connect Live to Wire 1 and 2
- 3. Connect Neutral to Wire 3 and 4
- 4. Remove the T12 or T8 Tube
- 5. Clip in the T5 adapter - Clip in the T5 bulb
- 6. Turn on the power and installation is completed

AFTER

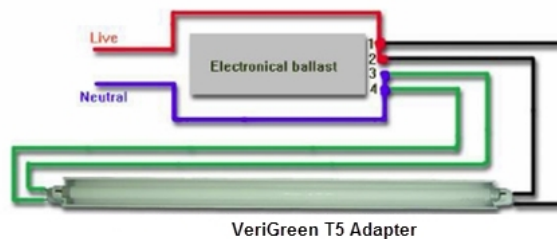

**DO NOT INSTALL ADAPTERS WITHOUT BYPASSING THE EXISTING BALLAST**



VeriGreen Inc  
20 Lindsay Road, Cambridge, ON, N1R 7K6  
Phone: 519-653-6000 Fax: 519-653-1016



Please call your distributor with any questions, or the home office at ph 519-653-6000 ext. 222 or 225